



PX2 BARREL FEEDER FLAPS REPLACEMENT INSTRUCTIONS

Tools needed: Flathead screwdriver.

1. Ensure the pitching machine is turned completely off. (The main power switch as well as the computer.)




2. Remove the balls from the barrel.
3. Lift Motor up and remove belt from Pully.
4. Remove the belt from the barrel feeder.
5. Remove the barrel from the barrel feeder head. And place it on the ground with the four (4) exit cups facing up.



6. Using Flat Tip Screw driver remove the old flaps by unscrewing them from the four (4) exit cups.
7. Place the new barrel feeder flaps as show in the photo below. (Note the orientation). Install the supplied hose clamp half way down in the middle of the exit cup and tighten the clamp using a flathead screwdriver. (Be sure to place the tightening screw on the inside edge of the exit cup so it is not protruding on the outside edge of the barrel.)



8. Return barrel back to the barrel feeder head. Make sure the barrel is pushed all the way towards the exit port.

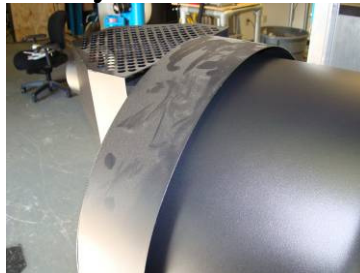

9. Spin the barrel by hand clockwise, (the same way the motor spins the barrel) making sure that the new flaps are folding closed over the exit cup hole the correct way.



10. Return the belt to its original position.

11. Replace the balls. Be sure to reposition the exit port of the barrel directly above the down spout of the blower if the barrel feeder was moved.