

# ProBatter Sports

## ATEC ARM Video Conversion Operational Instructions



## **Before You Begin**

*Please note that the ProBatter system does not control the ATEC pitching machine. Therefore, if you turn the ATEC machine on without first turning on the ProBatter system, the machine will throw pitches with no video.*


*Please refer to the ATEC for any questions related to the pitching machine (speed adjustment, height adjustment, ball jams, maintenance, etc)*

# Turning the System “ON”


- 1) Turn on the projector by pressing its power button.
  - a. Please note: Your Projector should be set to the VGA or Computer input. If someone has changed this or if you don't get a video signal, please refer to the Projector manual for more detailed instructions on setting up the inputs. Since Projector models frequently change, your projector may look different than the photo.



- 2) Turn on the ProBatter PC system by pressing its power button. Since PC models frequently change, your PC may look different than the photo.

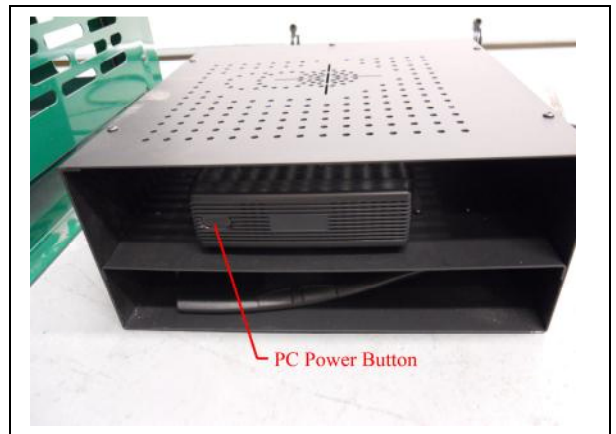

- 3) The ProBatter Video Alignment screen will display on the video screen. Make any adjustments needed to make it look like the photo here. The screen should be filled with green and the red border should not be seen.

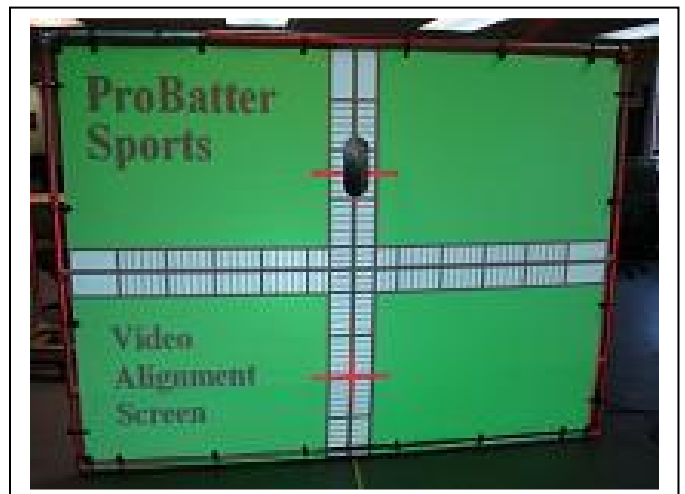

# Running the System (Throwing Pitches)

- 1) Make sure everyone and everything is out of the way in the Cage. We are about to throw pitches! Use the ATEC power switch (as shown here) to start and stop the machine.




- 2) It is VERY important to always turn the ATEC machine off right after a pitch is thrown. If you wait too long before turning it off, the next pitch thrown when it's turned back on will come out without a video!!!



# Adjusting the Video Timing

- 1) If the video is not in sync with the machine, you will have to adjust it using the Keyboard. Pull the Keyboard out from under the PC. Stand on the side so you can see the front of the screen with the keyboard in hand. With the machine running (throwing pitches) press the “m” or “p” keys on the keyboard to adjust the timing. “p” makes the ball come out earlier and “m” makes the ball come out later. Make your adjustment slowly. Press which every key you need once and wait for another pitch to see the results.

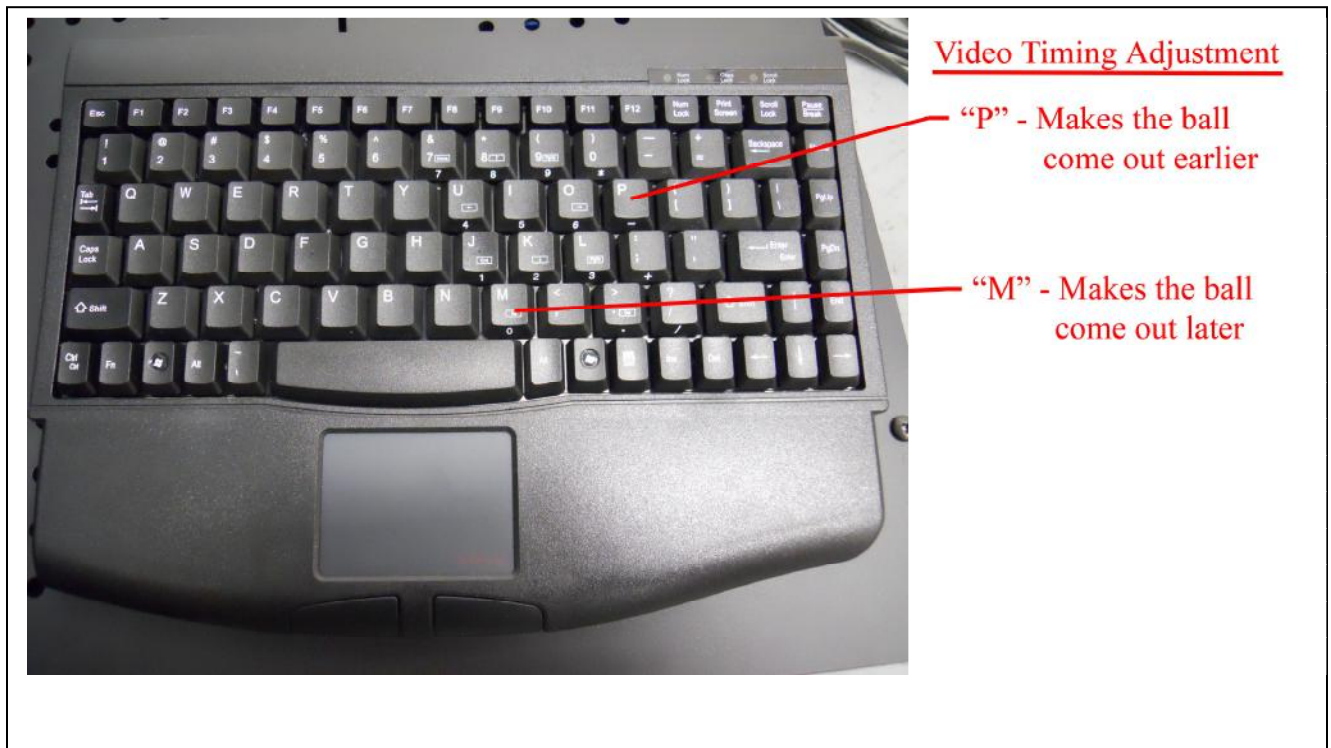

- 2) Once you are happy with the Video Timing, put the keyboard back under the PC.
- 3) It is VERY important to always turn the ATEC machine off right after a pitch is thrown. If you wait too long before turning it off, the next pitch thrown when it's turned back on will come out without a video!!!

# Turning the System “OFF”

- 1) It is VERY important to always turn the ATEC machine off right after a pitch is thrown. If you wait too long before turning it off, the next pitch thrown when it’s turned back on will come out without a video!!!



- 2) Press the “s” key on the keyboard to shut down the PC



## Turning the system “OFF”

“S” - Press the “s” key to shut down the PC

- 3) Press the power button on the projector twice to turn it off. Since Projector models frequently change, your projector may look different than the photo.

