

P100 Mini ATX PC Installation.

1. Mount Mini ATX PC up side down in cabinet. (You may need to drill small holes in the mounting plate and use self tapping metal screws.)
2. Remove old pc power cord.
3. Mount the Power Adapter next to the PC removing the Velcro covering.
4. Plug Power into outlet and PC.
5. Connect the cables to the PC as shown (Image 1)
6. Connect the Touch Screen power to the power connection which comes out of the PC top where the hole is drilled. (Image 2/ Image 3)
7. Connect the PC ON/OFF Power Connection, to which comes out of the PC top where the hole is drilled, to the interface board cable (Usually Black and white cable) The connection has a three hole prong connection, ensure that the one with the two wires are connect to the plug. (Image2 / Image 4)
8. Power system on and test.

IMAGE 1



IMAGE 2

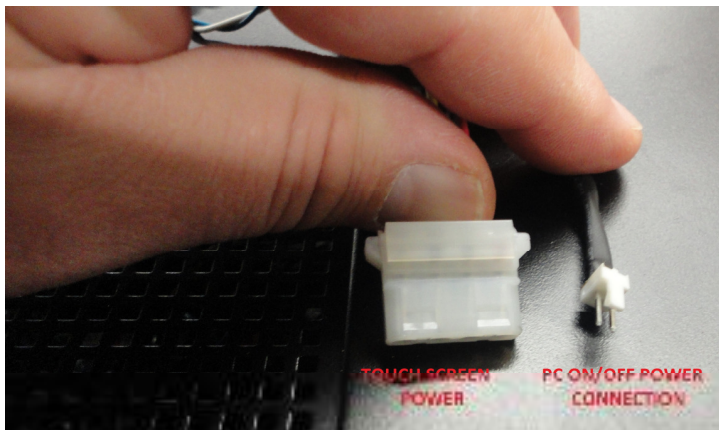


Image 3

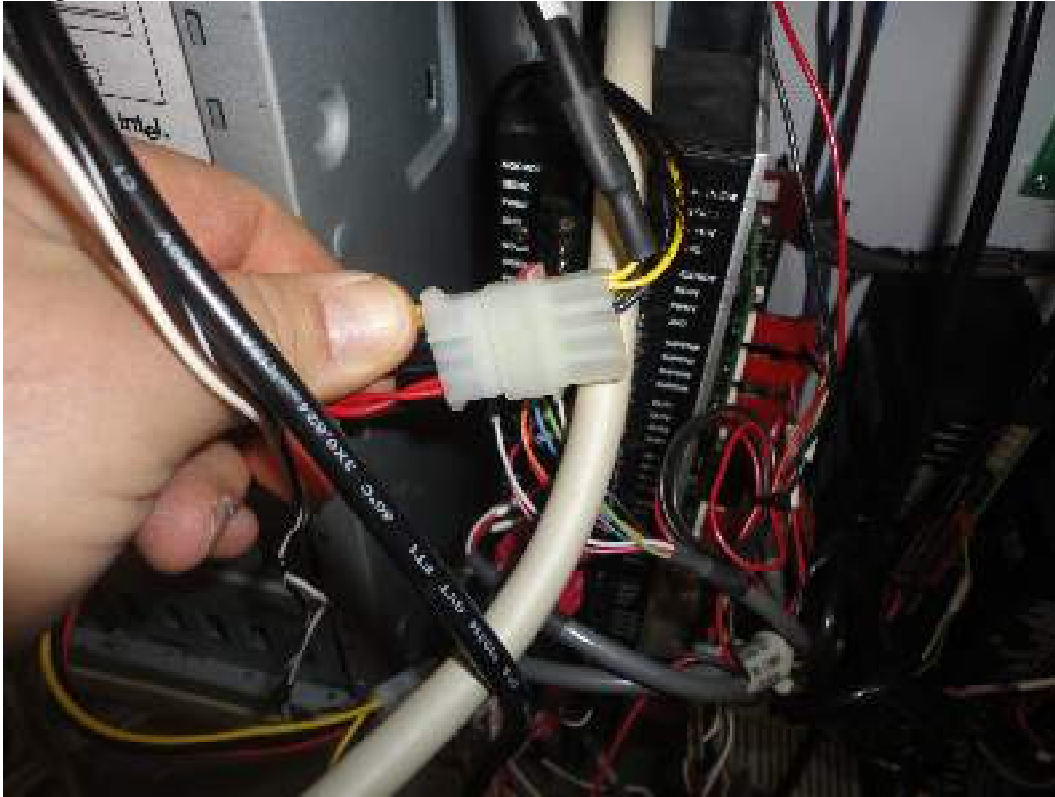


Image 4

